

HEIGHT FIXTURE

ITEMS NEEDED:


- 1. Steel plate included in packaging
- 2. 4 Screws included in packaging
- 3. ¾" X 3" X 9" board
- 4. 2 each 1 1/8" long dry wall screws
- 5. Clamp

INSTRUCTIONS:

- 1. Cut the boards to match the drawing shown
- 2. Screw the plate to the main board as shown in drawing
- 3. With the boards pressed down on a flat surface clamp the boards together and screw the 2-drywall screws flush. Remove the clamp from the unit.
- 4. Test to make sure that the unit is flat on the bottom

See next page for drawings.

MAG-DRO®

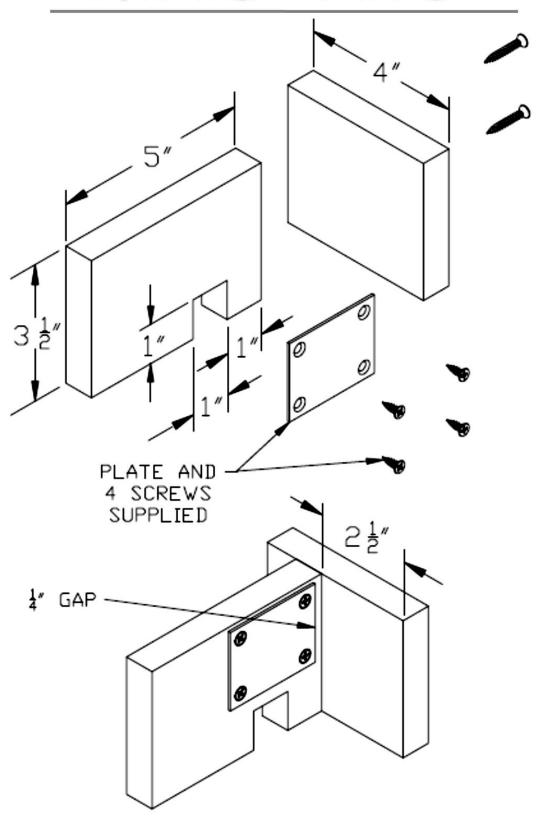

See previous page for detailed instructions.

U.S. Patent 7,735,237 and Patent Pending MAG-DRO, INC. www.mag-dro.com